


## BLANKE SECUMAT

BLANKE SECUMAT is a tear-proof rolled uncoupling underlayment that provides a secure bonding surface for ceramic tile and natural stone installations on both interior floors and walls. BLANKE SECUMAT minimizes tile assembly thickness and provides crack isolation protection that helps prevent damage to the tile covering caused by lateral substrate movement. This lightweight, easy-to-install underlayment features low elevation and requires less thinset than other rolled uncoupling products.

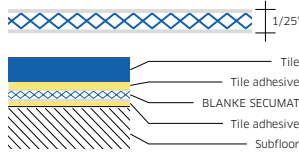

### BLANKE SECUMAT

1 roll = 538 sq. ft.; measure: 3.28 x 164 ft.	Pack: 1 roll	
	<b>Part no.</b>	<b>\$/roll</b>
1 roll = 538 sq. ft.	758-904	1,192.06
1 pallet (12 rolls) = 6,456 sq. ft.	758-904	1,132.92

### BLANKE SECUMAT

1 roll = 161 sq. ft.; measure: 3.28 x 49.2 ft.	Pack: 1 roll	
	<b>Part no.</b>	<b>\$/roll</b>
1 roll = 161 sq. ft.	758-904-15	374.98

#### Advantages:

- > Low elevation
- > Easy to cut and install
- > Uses less thinset than other uncoupling products
- > Provides uncoupling crack isolation properties
- > Approved for wood and cement substrates
- > Approved for use of modified thinset with porcelain tile
- > Approved for all tile sizes including mosaics

#### Expert's tip:

Suitable to provide crack isolation under partial areas of an installation

#### Material features:


BLANKE SECUMAT is constructed from a fiberglass reinforcing mesh embedded between two layers of polyester fabric.



1 APPLY LOOSELY MIXED MODIFIED THINSET MORTAR TO THE SUBSTRATE USING A 3/16" V-NOTCHED TROWEL.



2 APPLY BLANKE SECUMAT TO THE SUBSTRATE AND EMBED MAT WITH FLOAT OR ROLLER.\*

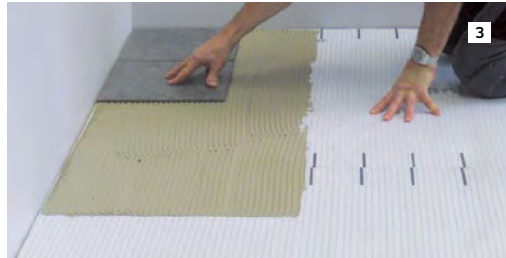

3 WORK THIN-SET MORTAR INTO THE SURFACE OF BLANKE SECUMAT AND SET THE TILES.



4 REMEMBER TO INSTALL PERIMETER JOINTS AND BLANKE EXPANSION JOINTS PER TCNA GUIDELINES EJ171.\*\*

\*NOTE: Observe open time of chosen mortar.

\*\*NOTE: Read complete instructions before installing.

